

# DM650VI SENSOR/WALL MOUNTED VOLTAGE/mA DISPLAY

- **±50 V, ±50 mA INPUT (loop impedance < 30 R)  
SCALABLE TO ANY ENGINEERING UNIT**
- **ALARM RELAY, USER-SET DISPLAY MESSAGING**
- **USB AND NFC INTERFACE**
- **BATTERY POWERED**
- **5000 POINT DATA LOGGER**

## ➤ INTRODUCTION

The DM650VI is a battery powered indicator. The indicator accepts a signal within the ranges of  $\pm 50$  V or  $\pm 50$  mA signal and provides a powerful display interface based on a 6-digit 14 segment LCD display.

User-set scaling is provided to allow the user to set process ranges between -999999 and 999999 with full control over decimal point location, with the option to show process units.

A 22-segment user-set linearisation/correction function is also offered. The instrument offers an advanced display mode allowing the user to display not only process variables but one or two (1 - 32) character messages. This feature is further enhanced by the ability to split the process range into eight user-set bands, each band having independent user-selected messages.

## ➤ FEATURE HIGHLIGHTS

### RELAY TRIP

The instrument is equipped with a volt-free changeover-type relay. The user may select one of seven actions, including deviation operation, with adjustable set point and hysteresis. The Relay may be turned off if not required. An option is provided to trigger a display alert-event when the relay contact is on.


### DATA LOGGING FUNCTION

The DM650VI also provides a powerful data logging function. The number of log points can be set up to 5000; each point is time and date-stamped together with input process value (PV) and relay state information. The log rate is selectable in steps. The start of log can be delayed if required. Either fixed or rolling logs may be performed.

Two methods of reading the log are available. USB interfaced software reads the log and allows the user to save to a text file for export to other programmes. The NFC android interface allows data transfer to compatible android phones or tablets by using the downloadable App. The data can be graphed and forwarded by email, Bluetooth etc. The NFC interface is also capable of starting a new log with different log period and modes via the Android app.

### TEMPERATURE TRANSMITTER COMPATIBLE

As well as working with any voltage or mA signal, the DM650VI has space inside its housing to mount a standard 33 mm centre, head mount, (4 to 20) mA temperature transmitter. Any of the Status Instruments range of temperature transmitters can be used with the DM650VI to give a local temperature display. The temperature display mode takes advantage of the sixth digit to display engineering units. The DM650VI will add no noticeable load to a (4 to 20) mA loop.

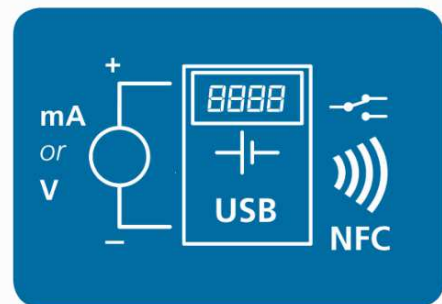

# DM650VI SENSOR/WALL MOUNTED VOLTAGE/mA DISPLAY

## DM650VI SPECIFICATIONS

ELECTRICAL INPUT		SPECIFICATIONS @20 °C
<b>Range/Options</b>	<b>Accuracy</b>	<b>Stability</b>
±50 V (full ±55 V)	± 10 mV	0.01 %/°C
±50 V resolution	±0.6 mV	
±50 mA (Full ±55 mA)	± 10 µA	0.01 %/°C
±50 mA resolution	±0.6 µA	
Max voltage	±56 V	
Max current	± 100mA	
Current loop impedance	< 30 Ohms	Loop volt drop of less than 0.6 V
Protection	Resettable fuse 120 mA	Reverse connection
To maintain full accuracy annual calibration is required: contact support@status.co.uk for details		

DISPLAY	
<b>Type/options/function</b>	<b>Description</b>
Display height	7.9 mm non-backlit
Display information options some information is displayed scrolling *1	6 digits 14 segment input value plus “Warning”, “Transmit”, “NFC”, “USB”, icons, 8 segment log volume/signal indicators. Date and time. Custom messages for visual alarms/information. Relay condition.
Display range	-999999 to 999999 numeric with °C, °F, °R, K in temperature mode
Decimal place	None to 5 places
High intensity LED	Alarm and warning options
*1 Below -5 °C ambient temperatures, scrolling messages are not practical due to the update speed of the LCD display. Below this use basic mode only.	

RELAY	
<b>Type/options/function</b>	<b>Description</b>
Type	Single pole change-over (common, N/o, N/c)
Rating	48 VDC maximum @ 1 A (5 mA minimum) 28 VAC RMS maximum @ 1 A

USB CONFIGURATION USER INTERFACE		
<b>Type/options/function</b>	<b>Description</b>	<b>Notes</b>
Configuration hardware	USB mini B port	A to mini B cable required
Configuration software	USBSpeedLink	Download www.status.co.uk
Operating system	Microsoft Windows	Win 7 or later
Configuration	Select user non-linearization Decimal point	Up to 22 data points Adjustable
Display configuration	Display mode	Basic and advanced
Pre-set sensor to setpoint mA	Locks display value	For diagnostics
Basic display mode	Bar graph as mA or % log fill and alert LED options	
Advanced display mode *1	Process value and or message A, B (32 character) and or alert LED flash. Update every 5 seconds/alternates between message A and B	
Display Pre-set display messages	Seven custom messages Eight user-adjustable temperature bands	Message A and message B options
LED alert	Eight user-adjustable temperature bands	Alert LED flash
Warning symbol	Out of range	Warning symbol will flash on
Battery monitor	Alert LED plus message	Relay option

# DM650VI SENSOR/WALL MOUNTED VOLTAGE/mA DISPLAY

Logger	Set device passkey number Clear/start new log	Device passkey is used to protect the NFC interface
Other device options	Synchronise clock Write tag/contact address Read/reset maximum and minimum values Location settings Android passkey	To PC time setting 24 characters Non-volatile memory  Latitude and longitude Set for Android app
Relay control	Name Action Set point Dead band	10 characters High/low/band/low battery Displayed units Displayed units
Live data	Read input value Read display value Relay state	mA loop signal Scaled volt/mA value Off/on
*1 Below -5°C ambient temperatures, scrolling messages are not practical due to the update speed of the LCD display. Below this use basic mode only.		

USB LOGGER USER INTERFACE		
Type/options/function	Description	Notes
Logger hardware	USB mini B port	A to mini B cable required
Logger software	USBLogLink	Download <a href="http://www.status.co.uk">www.status.co.uk</a>
Operating system	Microsoft Windows	Win 7 or later
Logger	Start/set log parameters	Interval/rate/(delay) start number of points/rolling or fixed log
	Read log parameters	
	Stop/start new log Reset maximum and minimum Synchronise/read clock	
	Read live data	Input value
	View log data/graph log data	Save data to CSV file

NFC LOGGER USER INTERFACE ANDROID		NFC ENABLED ANDROID DEVICE REQUIRED
Type/options/function	Description	Notes
Logger software	NFCLogLink	@ Google Play Store
Operating system	Android V4.4 Kitkat or later	NFC enabled
Logger	Start/set log parameters	Interval/rate/(delay) start number of points/rolling or fixed log
	Read log parameters	
	Stop/start new log Synchronise/read clock Reset maximum and minimum	
	View log data/graph log data	Save data to text file
	Transfer data via email etc.	Standard Android functions

NFC ENABLED ANDROID DEVICE REQUIREMENTS	
Tag Type	NFC Forum Tag Type 4 (max capacity 65536 Bytes)
RF Interface	ISO/IEC 14443 Type B Compliant (13.56 MHz)
Android device	Compatibility to read NFC Tag type 4 to full capacity 65536 bytes
Note: If the android device cannot read full bytes the maximum number of log points will be reduced.	

# DM650VI SENSOR/WALL MOUNTED VOLTAGE/mA DISPLAY

---

GENERAL	
Function	Description
Update rate	5 seconds
Relay response time	< 10 seconds
Battery	1 x (AA 3.6 V lithium)
Battery life	1-year minimum (longer depending on options selected)
Clock accuracy	±2 seconds per month typically

ENVIRONMENTAL	
Function	Description
Ambient temperature	Operating/storage (-30 to 70) °C
Ambient humidity	Operating/storage (10 to 90) %RH non-condensing
Protection	IP67, cable/probe entries must be sealed to IP67 to maintain
USB configuration ambient	(10 to 30) °C

CONNECTIONS	
Function	Description
Input sensor	Two-part screw connector
Output relay	Two-part screw connector
USB connection	USB mini B socket

MECHANICAL	
Function	Description
Enclosure	ABS, grey base, grey clamp ring
Display cover	Polycarbonate, clear
Case entries	M24 or M20 see ORDER CODES below
Front of display diameter	65 mm
Weight (approximate)	170 g


APPROVALS	
Function	Description
EMC	BS EN 61326
Ingress protection	BS EN 60529
RoHS	Directive 2011/65/EU

# DM650VI SENSOR/WALL MOUNTED VOLTAGE/mA DISPLAY


<b>ORDER CODE</b>	<b>DM650VI</b> (See below for housing code)
-------------------	--

<b>ORDER CODE</b>	<b>SCH4 HOUSING</b>				
	Body type		Base entry	Side entry A	Side entry B
<b>SCH4</b>	<b>B or C</b>	<b>0</b>	<b>Thread option</b>	<b>Thread option</b>	<b>Thread option</b>
B: Double side entry C: Single side with base entry		0	<u>Thread options</u>		
			00 = None fitted	16 = M16	20 = M20
			24 = M24	.5BSP = ½" BSP	.5NPT = ½" NPT
Example: 1 base entry (M24) with side entry A (M16)					
<b>SCH4</b>	<b>C</b>	<b>0</b>	<b>24</b>	<b>16</b>	<b>00</b>
For further options please contact sales@status.co.uk					

Body type B: 2 x side entry

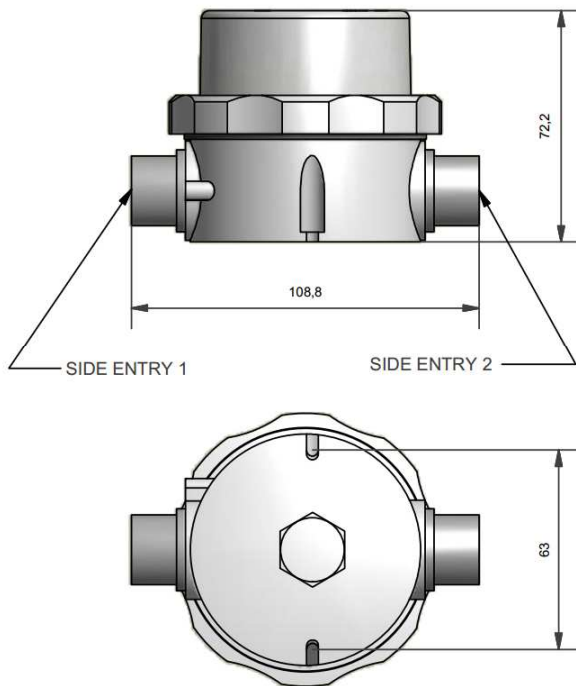

Body type C: 1 x side entry with 1 x base entry

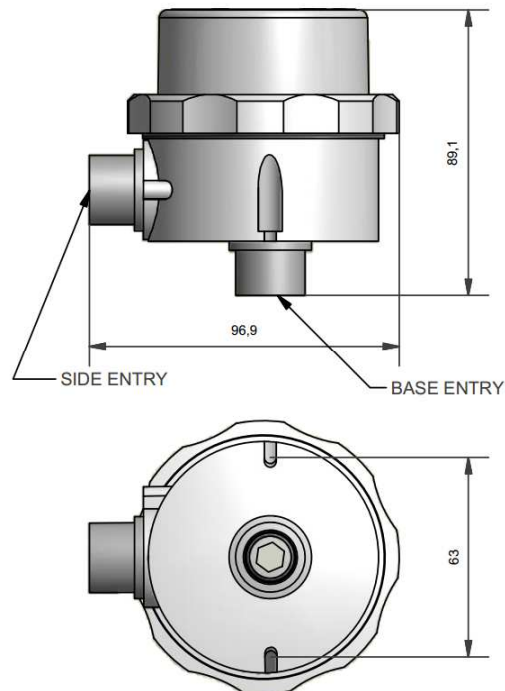

Dimensions in mm

ACCESSORIES	
Configuration software	USBSpeedLink free of charge from <a href="http://www.status.co.uk">www.status.co.uk</a>
USB logging software	USBLogLink free of charge from <a href="http://www.status.co.uk">www.status.co.uk</a>
NFC logging software	NFCLogLink free of charge refer to Google Play Store
USB programming lead	USB A to mini B programming lead, part number 42-200-0001-01
Battery 3.6 V lithium	Refer to sales@status.co.uk
Calibration certificates	Refer to sales@status.co.uk

To maintain full accuracy annual calibration is required: contact support@status.co.uk for details  
The data in this document is subject to change. Status Instruments assumes no responsibility for errors

Status Instruments Ltd  
Status Business Park  
Gannaway Lane, Tewkesbury  
Gloucestershire, UK  
GL20 8FD  
Tel: +44 (0)1684 296818  
Fax: +44 (0)1684 293746  
Email: sales@status.co.uk  
Website: www.status.co.uk

D2615-01-02 CN5651 DM650VI Data sheet, Page 5 of 5

